
WARING PRO®

HOT DOG GRILLER

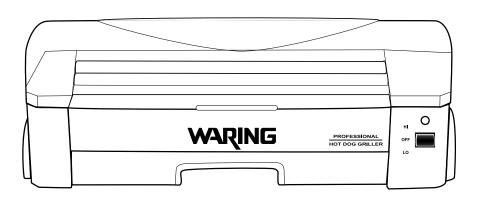

HDG150

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING.

- 2. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 3. Do not touch hot surfaces. Use handles or knobs.
- 4. To protect against electrical shock, do not immerse the appliance, cord or plug in water or other liquids.
- 5. Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries.
- 8. Do not use outdoors.
- 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11. Extreme caution must be used when using or moving appliance containing hot oil or other hot liquids.
- 12. Do not use the appliance for other than intended use.
- 13. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 14. Always turn control to OFF before disconnecting plug from wall outlet.
- 15. The cover is only to prevent dust. When in use, please leave cover open.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

BEFORE USING


Clean

- 1. Remove all packaging materials.
- 2. Wash the drip pan and cover with warm soapy water using a sponge or dishcloth.
- 3. Rinse and dry thoroughly to remove soap residue.
- 4. Wipe body clean with a damp cloth. Do not use abrasive cleaners or scouring pads. Do not immerse the appliance in water at any time.

Preheat Before First Use of Hot Dog Griller

- 1. Due to the manufacturing process, smoke and odor may be emitted during the first few uses.
- 2. Plug into a 120V AC outlet.
- 3. Preheat the hot dog griller until smoke and odor dissipate.
- 4. Remove the plug from wall outlet; allow unit to cool completely.

Note: You can expect smoke and odor during your first preheating, which is considered normal as it is part of "curing" the heating elements.

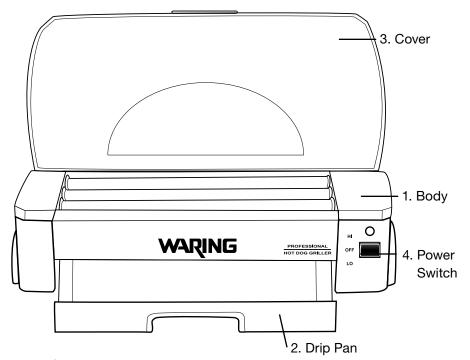

PARTS

1. Body

2. Drip Pan

The drip pan is used to catch oil and pieces from the roasted hot dogs.

3. Cover

To remove cover, grasp both sides of cover and lift up. Cover should always be in open position when grilling.

4. Power Switch

The power switch has as three functions: HI, OFF and LO. Plug the power cord into proper wall outlet, then press up to the HI position. The rollers will begin to heat and turn. The red light will illuminate to indicate the unit is on. When OFF is pressed, the unit stops working and the light turns off. LO is used to keep hot dogs warm and for cleaning.

HOW TO USE

After initial preheating and before first use, follow the steps below:

- 1. Place the drip pan into the body. Open the lid.
- 2. Plug power cord into proper wall outlet.
- 3. It is recommended to preheat grill for 5 to 8 minutes before adding hot dogs. Press HI to start rollers turning. Red light will turn on. It will take approximately 5 minutes for unit to heat up. Place hot dogs on rollers.
- 4. Check the progress of the grilling frequently. When finished, turn the switch to OFF and red light will turn off.
- 5. Remove the plug from wall outlet.
- 6. Remove hot dogs from griller and place on serving tray.

CAUTION: Hot dogs may burst during grilling, causing hot oil to splash.

NOTE: You can also use this hot dog griller to grill sausage and kielbasa. The cooking times will be approximately 20 minutes on the HI setting.

Important Notes:

- Be sure to use on a heat-resistant and even surface.
 Keep at least 4 inches away from walls and flammables in a well-ventilated area.
- When in use, make sure the hot dog griller is the only appliance operating on the circuit.
- Never immerse the grill body or cord in water or other liquids.
- Always use nonstick utensils when removing hot dogs from the rollers.
- Cover should always be open during cooking.
- Cover may be closed when storing unit to protect from dust.

CLEANING AND MAINTENANCE

After Use

- 1. Allow the unit to cool completely before cleaning.
- 2. Press switch to LO. When rollers begin to turn, take sponge or dishcloth and wipe clean.
- Turn to OFF.
- 4. Disconnect the plug from the wall outlet.
- 5. Wash the drip pan and clip with warm, soapy water using a sponge or dishcloth. **NOTE: Do not put in dishwasher. Hand wash only.**
- 6. Rinse thoroughly to remove soap residue.
- 7. Wipe body clean with a damp cloth.
 - Cover is removable for cleaning. Wash with warm soapy water, rinse thoroughly or place on top rack of dishwasher.
 - Do not immerse the appliance in water at any time.
 - Do not use abrasive cleaners or scouring pads.
 - A short power-supply cord (or detachable powersupply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - Extension cords may be used if care is exercised in their use.
 - If an extension cord is used, its marked electrical rating should be at least as great as the electrical rating of the appliance, and the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTE: Any other servicing should be performed by an authorized service representative.

NOTES		



©2011 Waring Consumer Products 150 Milford Road East Windsor, NJ 08520 www.waringpro.com Printed in China

> HDG150 IB 11WR120852

> > IB-10689